

INSTALLATION MANUAL

SHOWER ENCLOSURE

HINGED FRAMELESS

MODELS:


SDK30

SDK32

SDK36

SDK42

SDK4230

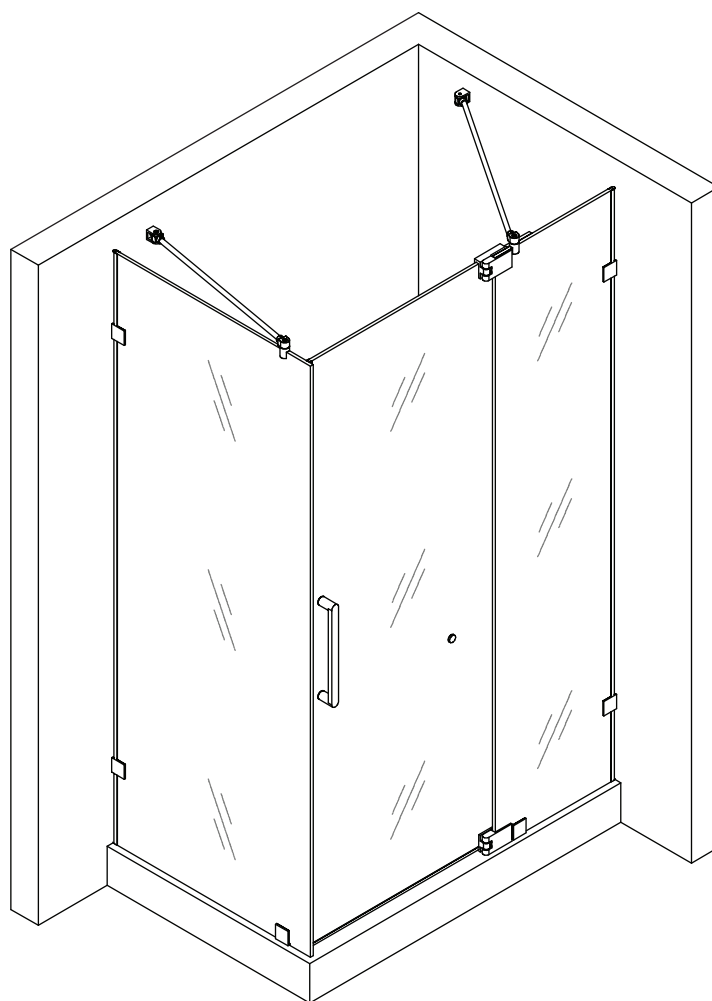

MODEL# SDK



READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT



INSTRUCTIONS THAT, IF IGNORED, COULD RESULT IN DEATH OR SERIOUS INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT. THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.

ATTENTION!



2 PEOPLE ARE REQUIRED TO LIFT AND DURING ENTIRE INSTALLATION OF THIS PRODUCT



INSTALLATION OF THIS PRODUCT BY AN INEXPERIENCED INSTALLER MAY RESULT IN PERSONAL INJURY OR DEATH!



- We reserves the right to change, update, modify, alter, redesign this manual/product or its policies without prior notice!
- It is your responsibility to visit the website to download or contact customer service For the most updated version of the installation instructions.
- We shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!

NOTES:


- Limited warranty is void on any commercial installation.
- We are not responsible for local code compliance for this product.
- Building and plumbing codes may vary from state-to-state in accordance to your location.
- We are not responsible for providing any compliance certifications.
- We are not responsible to provide any type of certifications for this product.
- Under no circumstances we shall not be liable for any and all incidental damages sustained in connection with this product Neither manufacture, nor distributor, nor retailer is responsible for water damage or flood caused due to use of this product.
- Under no circumstances We shall not be liable for any and all fees, cost defect. of installation/re-installation/removal, subsequent damage or transportation in case of the product defect.

ATTENTION:

- Always rest glass on a leveled surface.
- The glass panels are tempered and cannot be cut.
- Fiberglass, acrylic or sheetrock construction might not be sufficiently strong enough to support the shower door enclosure. You should use the wood framing from behind the face edge of the stall to provide a secure mounting to the door. Apply a bead of silicone between the walls and base of the stall.
- For optimum performance, you should install the shower door perfectly level on a level surface.
- By not leveling the unit during construction the unit may leak causing possible water damage.



PARTS

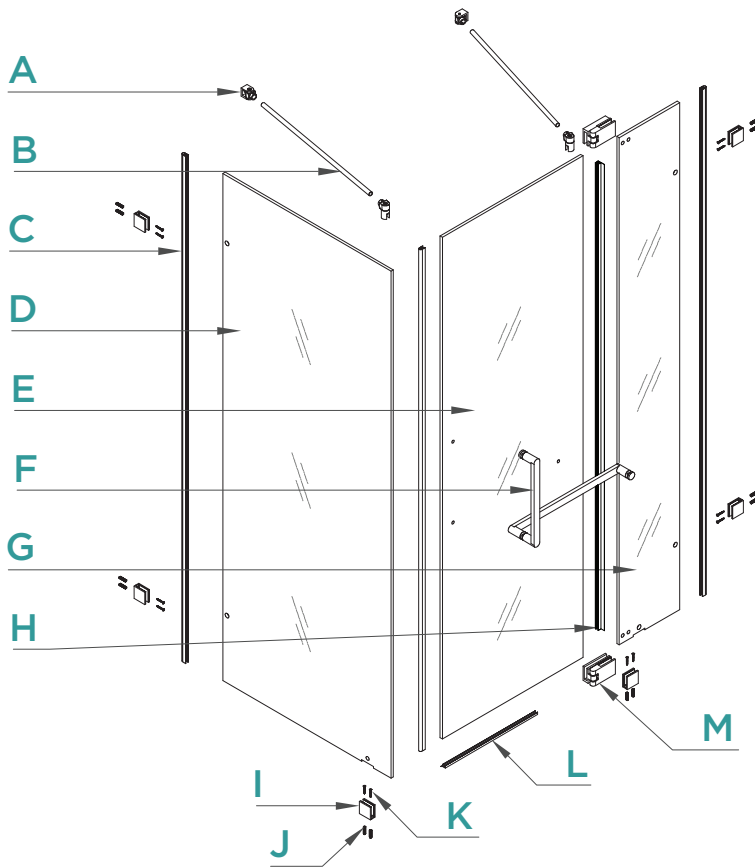


COMPONENTS AND HARDWARE

During unpacking the product and prior to installation inspect your new product for any damages or missing parts. Do not attempt to install or operate the product if the product is damaged.

Part A		2 Pieces	Arm Components
Part B		2 Pieces	Support Arm
Part C		3 Pieces	Seal Strip
Part D		1 Piece	Glass Panel
Part E		1 Piece	Glass Door
Part F		1 Piece	Door Handle
Part G		1 Piece	Glass Panel
Part H		1 Piece	Seal Strip
Part I		6 Pieces	Door Joint
Part J		14 Pieces	Plastic Anchor
Part K		14 Pieces	Screw
Part L		1 Piece	Bottom Threshold
Part M		2 Pieces	Door Hinge


REQUIRED TOOLS



DRILL



LEVEL



SILICON GUN



MEASURE TAPE



FLAT SCREWDRIVER



Ø6 DRILL BIT



PENCIL




PHILLIPS SCREWDRIVER



Ø8 DRILL BIT



ALLEN KEY




UTILITY KNIFE



1

ATTACHING THE BASE

Attach the base to the floor of the shower area.
(Professional install recommended)

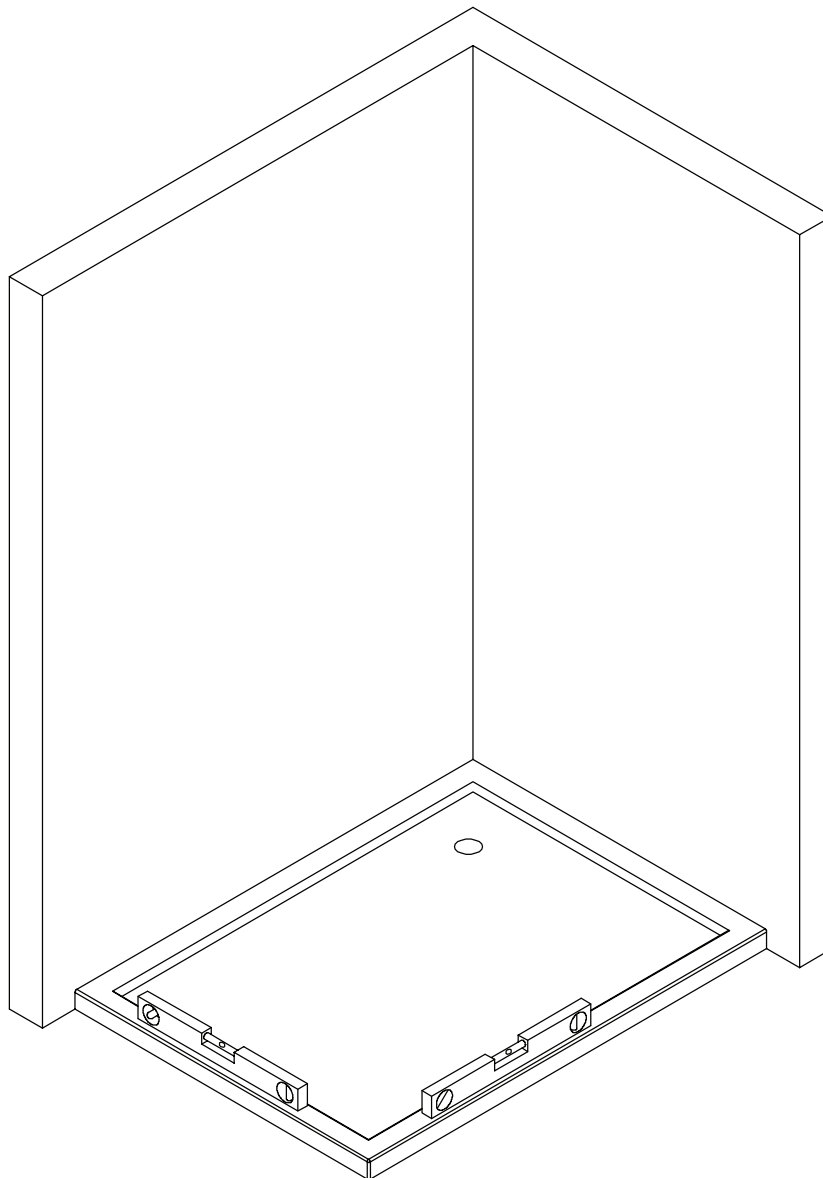



2


PREPARING THE FIRST FIXED GLASS PANEL

2.1


Attach the plastic seal (C) to aside of the fixed glass panels (D,G), as shown.

2.2


Attach the door joints (I) to one side of the panel (over the seal), using screws included with the joints.

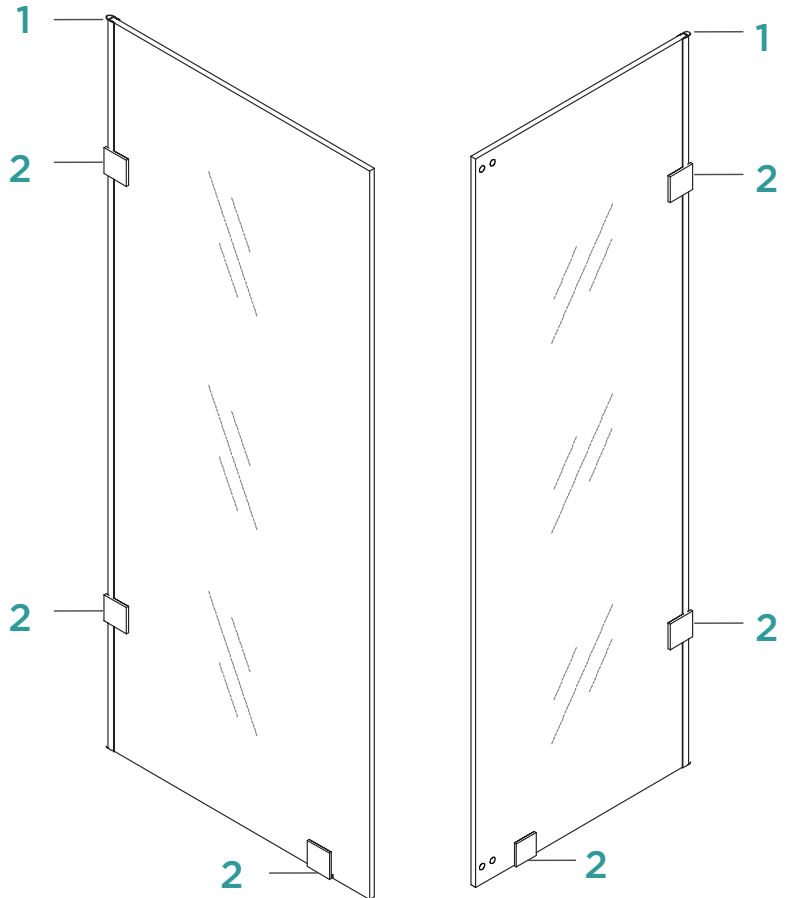

2.1

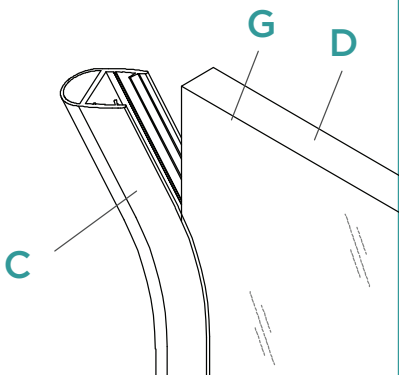

2.2

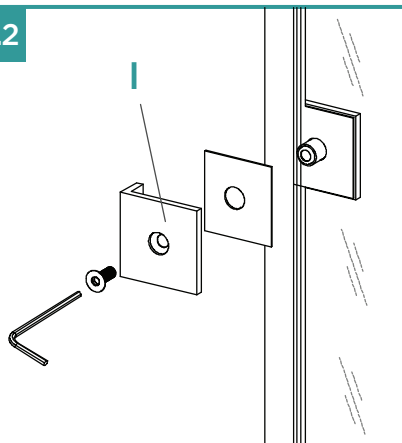



3

ATTACHING THE FIXED PANELS

3.1

Use a pencil to mark the screw points in the wall, based on the location of the joints (I).

3.2


Use a size 6 drill bit and insert the wall anchors (G) at the drilled points.

3.3


Attach the joints to the wall with screws (K), using a screwdriver.

3.4


Attach the joints (I) to the fixed panel (D, E) using screws included with the joints.

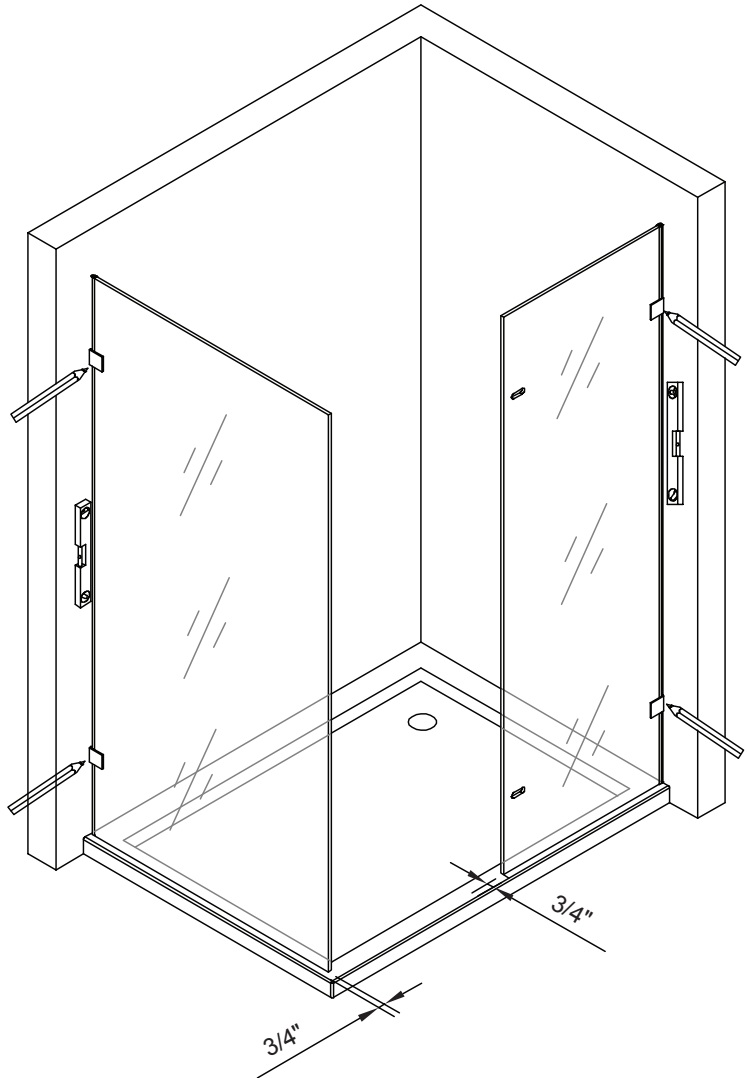


3.1

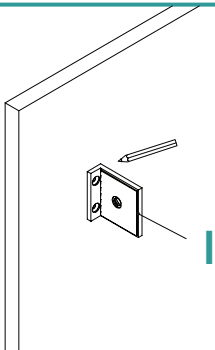


3.2

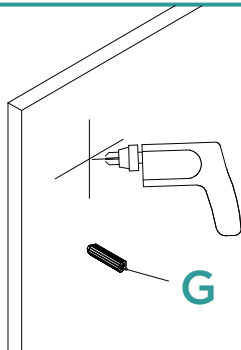

3.3

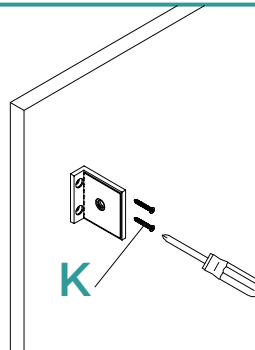

3.4

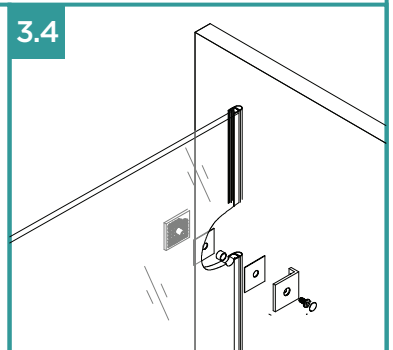



4

ATTACHING THE SUPPORT ARM

4.1

Use a pencil to mark the screw points for the support arm (B).

4.2

Use a size 6 drill bit to make the holes in the wall.

4.3


Insert the wall anchors (J) into the holes in the wall.

4.4


Attach one end of the support arm (A) to the wall, using screws (K).

4.5


Attach the other end of the support arm (A) to the fixed panels (D,G) using screws included with the door stop. Tighten with the Allen key.

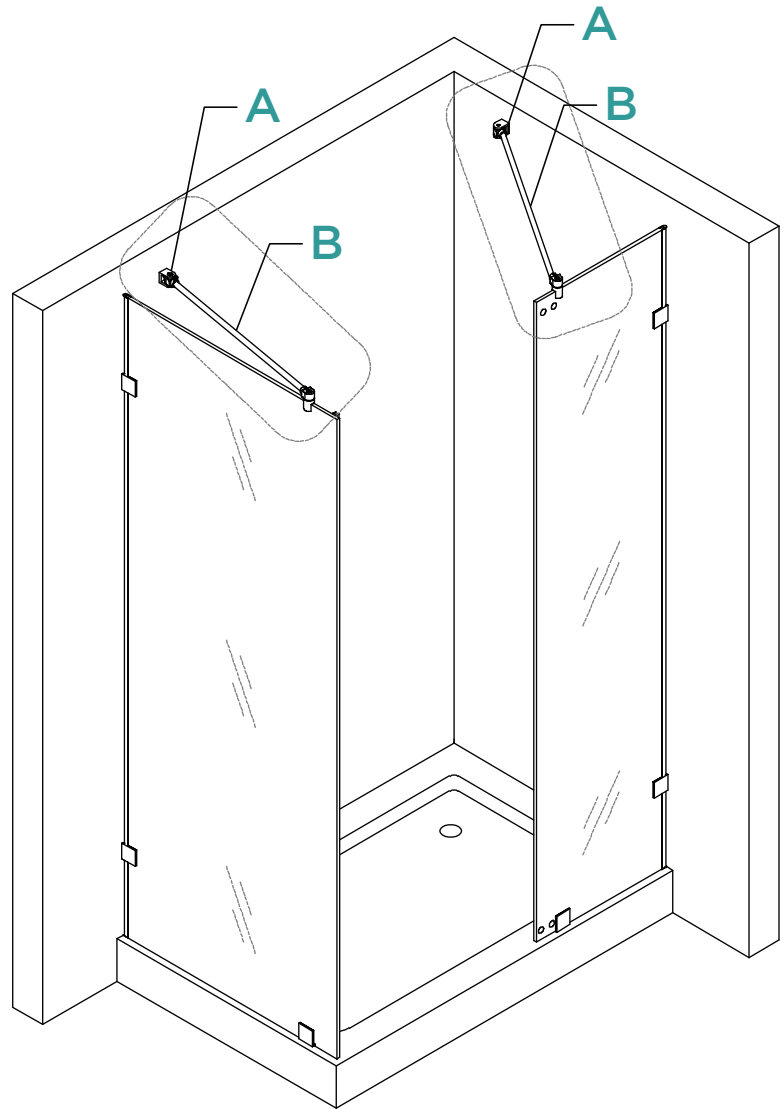


4.1

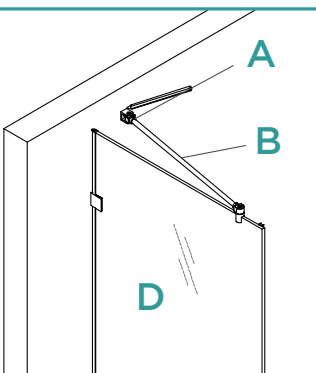


4.2

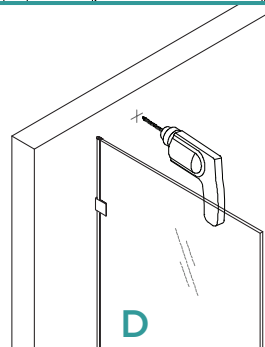


4.3

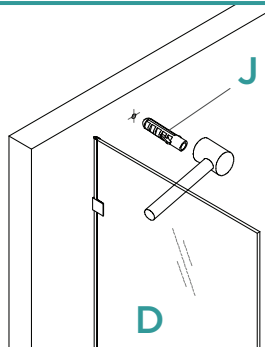

4.4

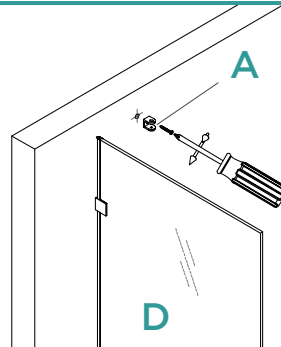

4.5

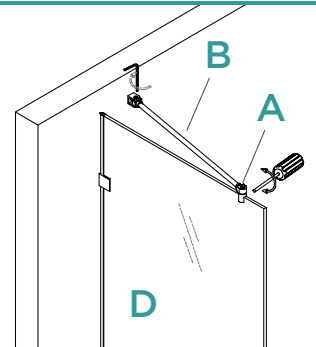



5




ATTACHING THE GLASS-TO-GLASS HINGE

5.1

Install the hinge (M) on top of the door and tight with an allen key.

5.2

Install the hinge (M) on bottom of the door and tight with an allen key.

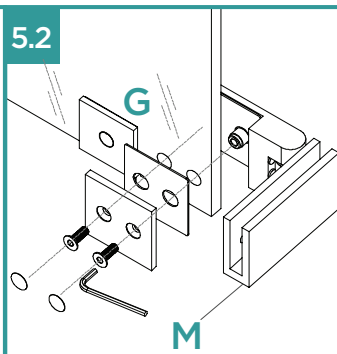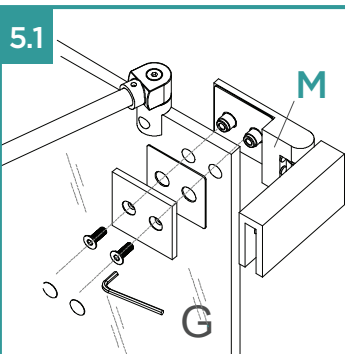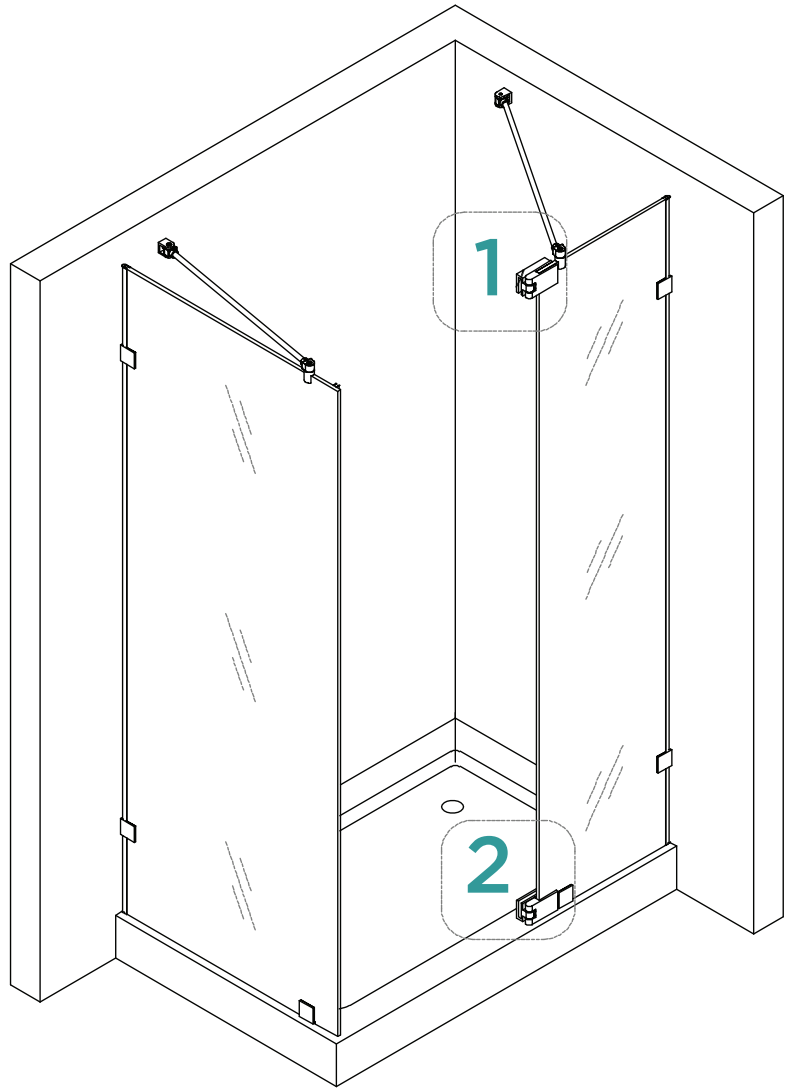

6

ATTACHING THE GLASS DOOR

6.1

Affix seal strip (C) to the front of the glass door (E).

6.2

Affix seal strip (H) to the back of the glass door (E).

6.3


Slide the door (E) into the hinges of the fixed glass panel (G).

6.4


Close the door gently.

6.5



Adjust the door by sliding it right/left.
Ensure the seal strip meets the side glass panel.
Tighten screws with allen key.

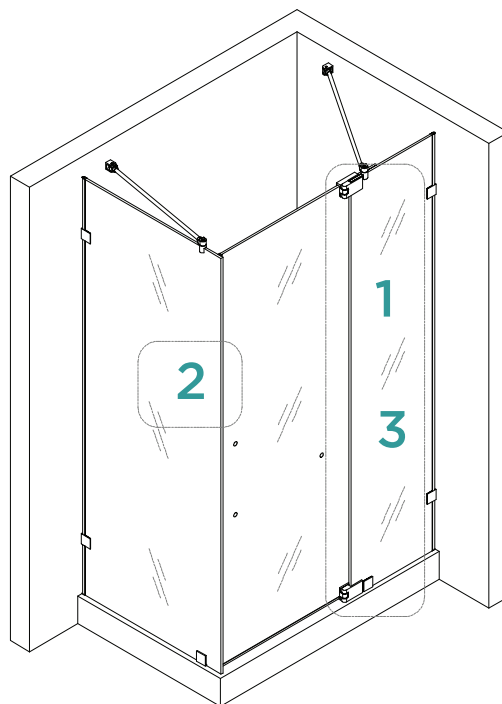


6.1

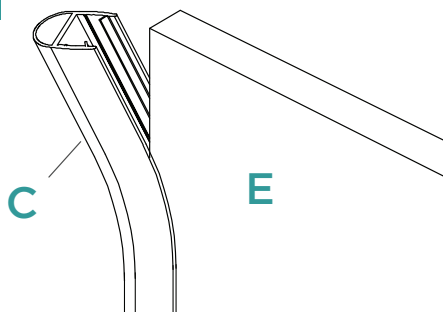


6.2

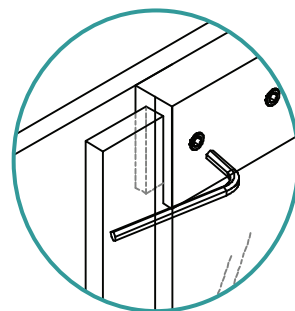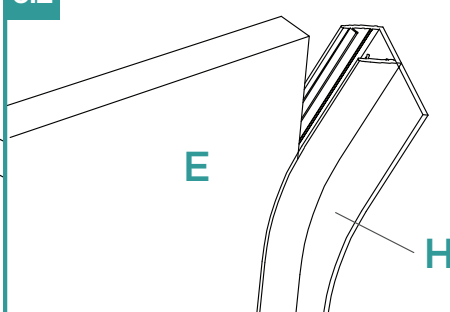


6.3

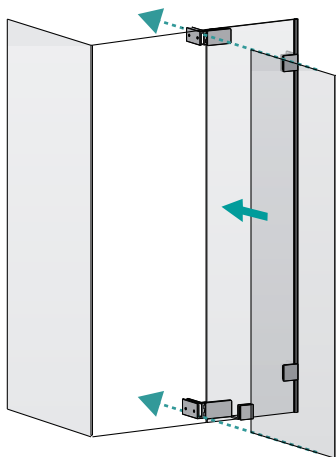

6.4

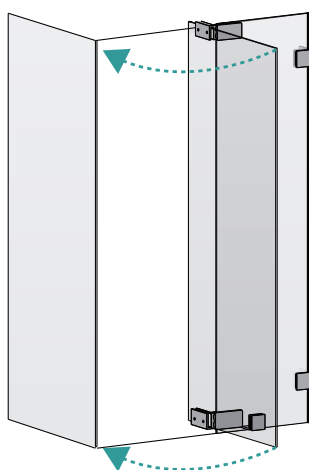

6.5

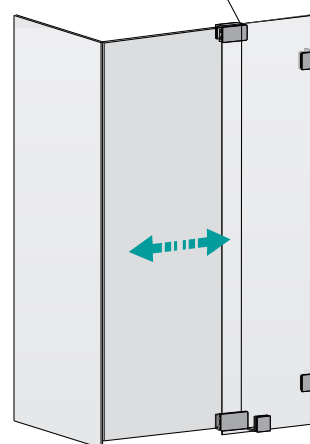



7

ATTACHING THE DOOR HANDLES


7.1

Attach the shorter door handle (F) vertically to the outer side of the glass door using screws included with the handles.


Attach the larger door handle (F) vertically to the inner side of the glass door using screws included with the handles.

7.2


Affix bottom threshold (L) to the bottom of the glass door (E).

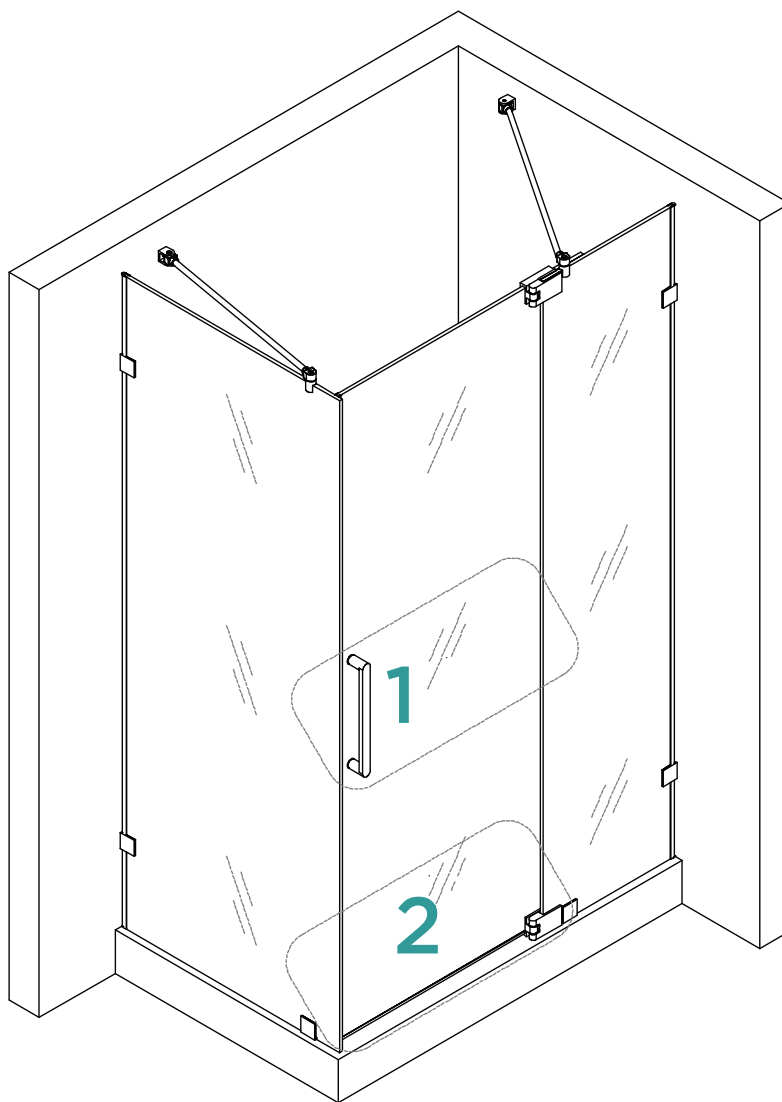

7.1

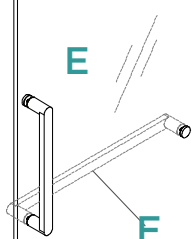

7.2

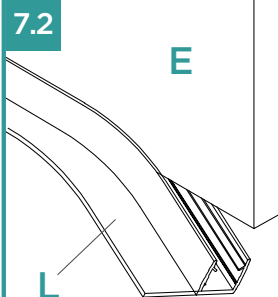




8

SECURING THE GLASS DOOR

Secure the seals, panels, and door with caulking gun and high-quality silicone or bathroom grade caulk.

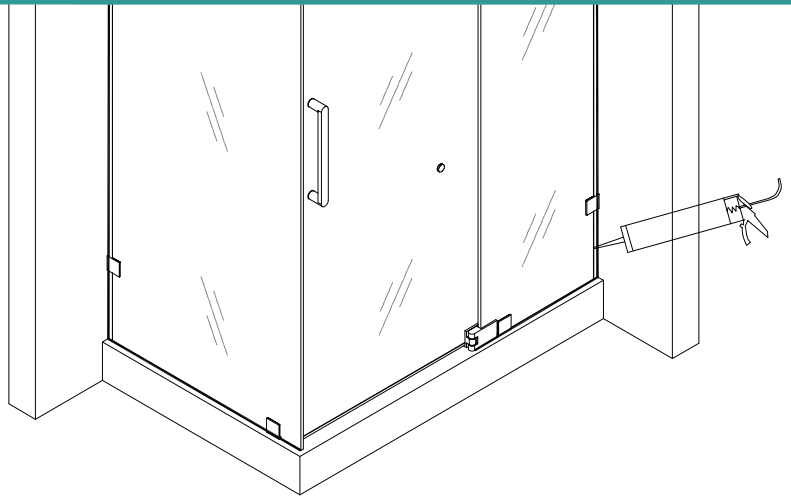


FINISHED

AFTER
INSTALLATION



WAIT 24 HRS
BEFORE USE

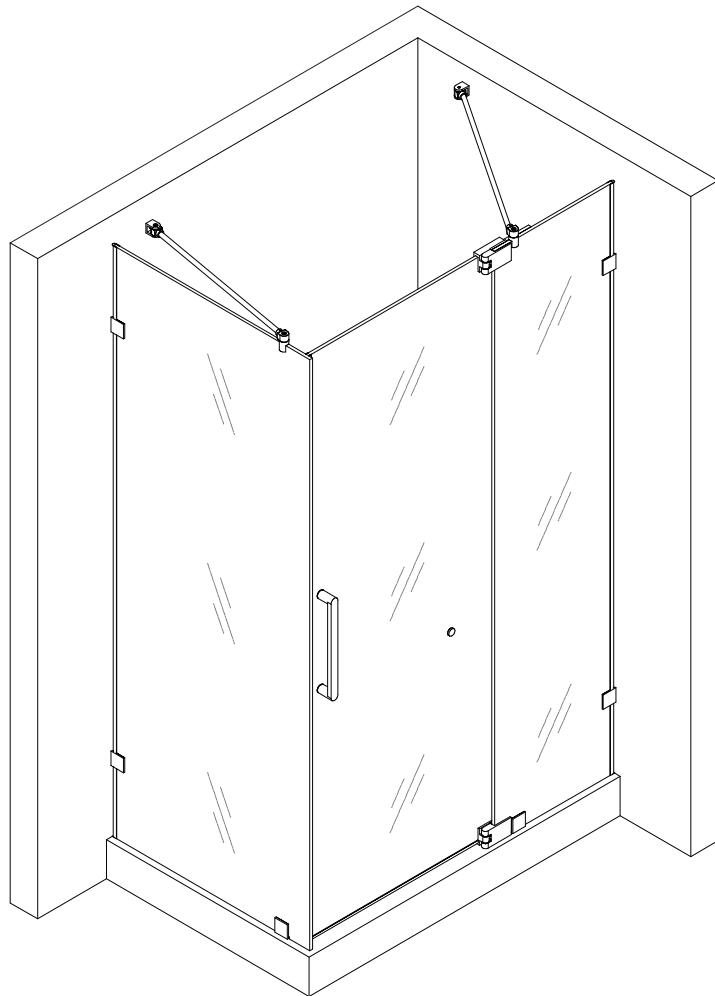



206 WEMBLY ROAD - NEW WINDSOR, NY 12553
P: 718.602.6060 F: 718.963.2082 - E: INFO@FINEFIXTURES.COM
TOLL FREE: 1.877.8FIXTURES
FINEFIXTURES.COM

